



Dismantling housing, battery, circuit LogLink PA0085

pure dismantling of assemblies based on images

Written By: Meinolf



INTRODUCTION

How do I get the body of LogLink PA0085 mobile spare battery 2200 mAH apart to remove the battery and circuit



TOOLS:

- screwdriver according to the screws used /
passender Schraubenzieher (1)
-

Step 1 — open housing




- Insert small screwdriver into the gap between the two shell halves of one of the three tabs and pry. Photos should only give indications of the position and shape of the flaps! Housing halves tilt it, note rear flaps

Step 2 — Remove battery



- Remove Battery

Step 3 — Remove circuit

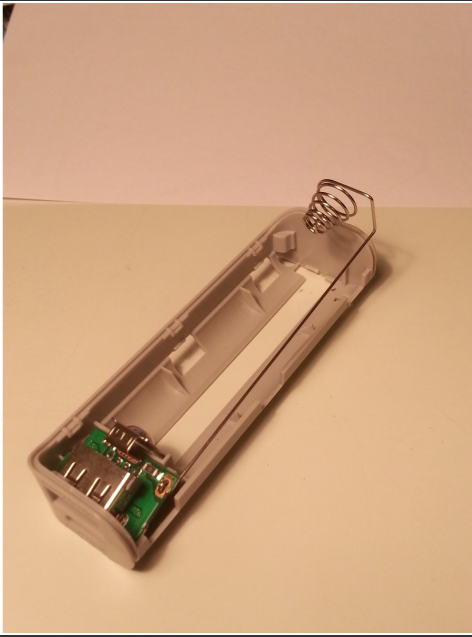

- carefully pry wire spring at the negative pole down and plastic nose and lift. Circuit depends on wire and tilts with high pull

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-06-19 03:42:17 PM.